

1/9

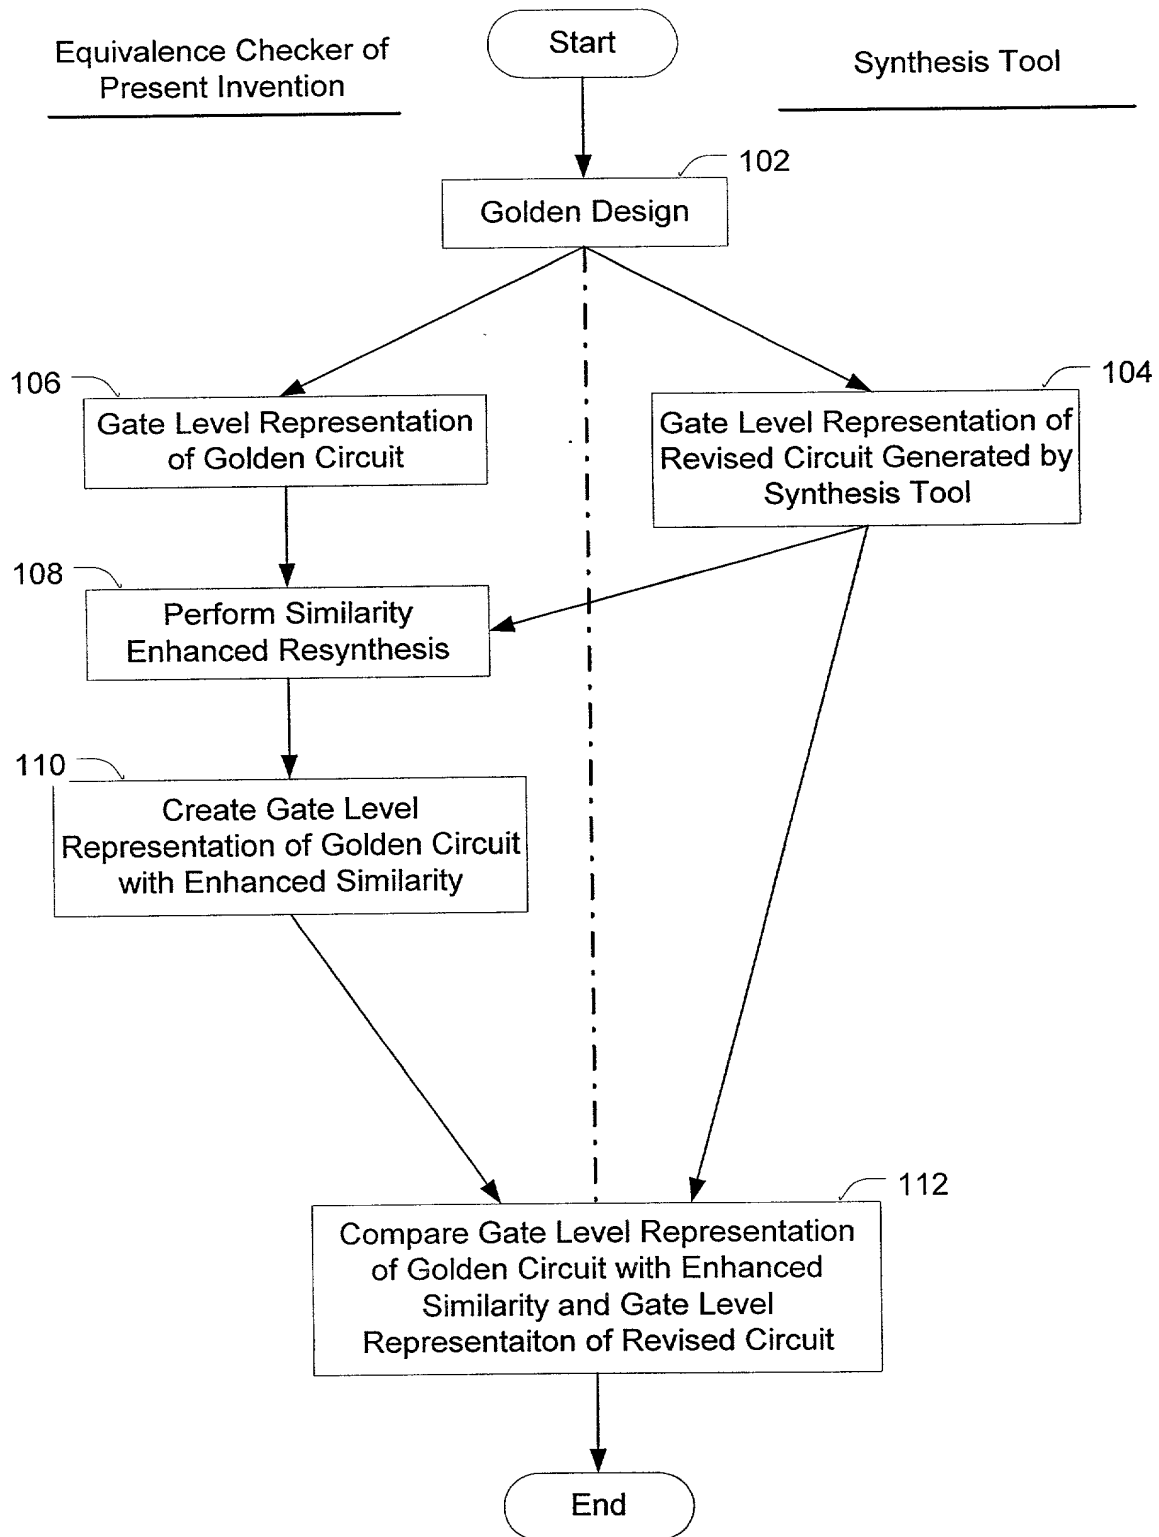


Fig. 1

2/9

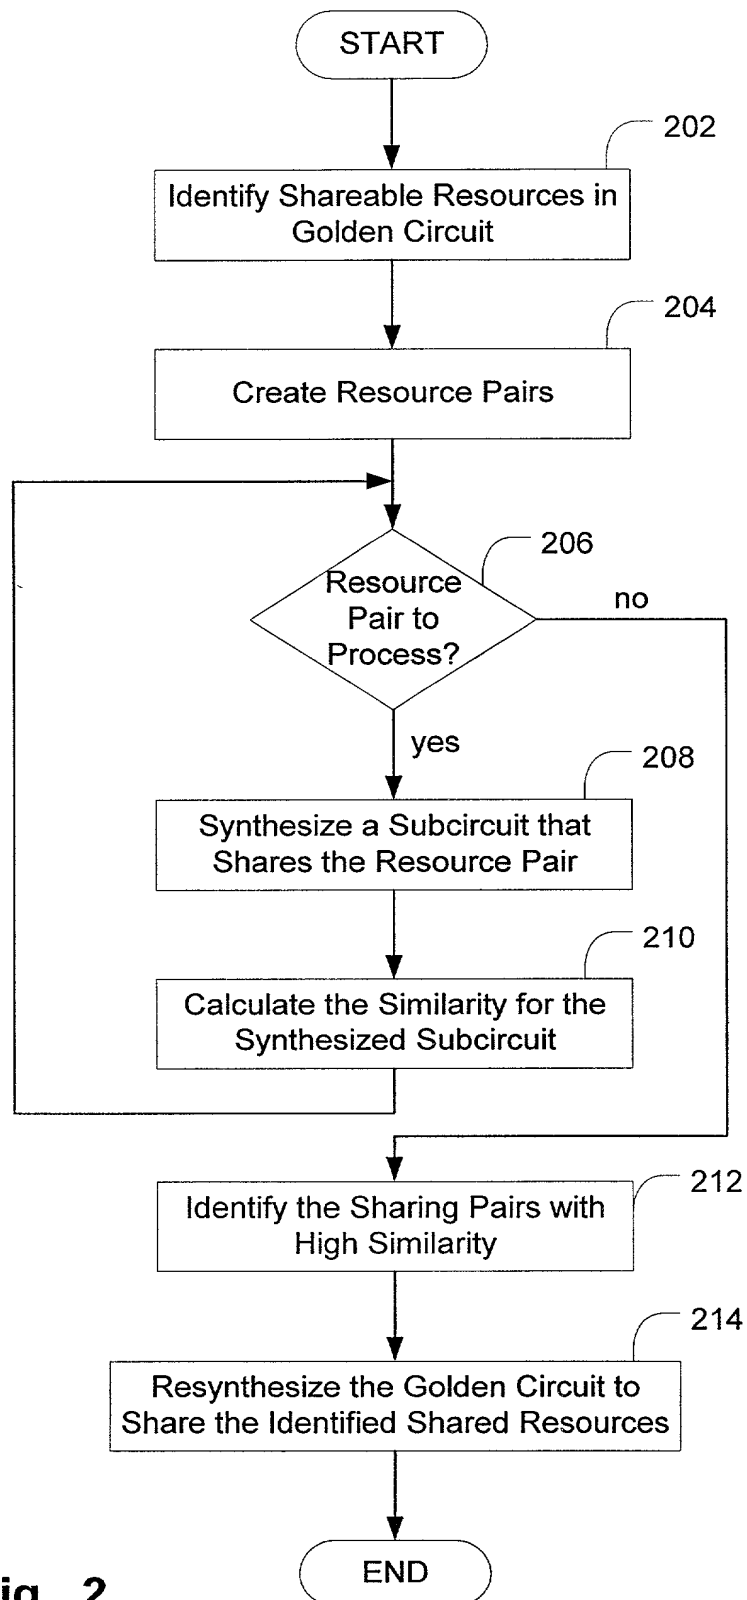


Fig. 2

3/9

Verilog Example For Resource Sharing Learning

```
module example(in1,in2,in3,in4,in5,in6,in7,in8,sel,y);
input [3:0] in1,in2,in3,in4,in5,in6,in7,in8;
input [2:0] sel;
output [7:0] y;
reg [7:0] y;

always @(in1 or in2 or in3 or in4 or in5 or in6 or in7 or in8 or sel) begin
  case(sel)
    1:
      y = in1 * in2;    // multiplier m1
    2:
      y = in3 * in4;    // multiplier m2
    3:
      y = in5 * in6;    // multiplier m3
    default:
      y = in7 * in8;    // multiplier m4
  endcase
end

endmodule
```

Fig. 3

4/9

(a) Sharing Pair Examples

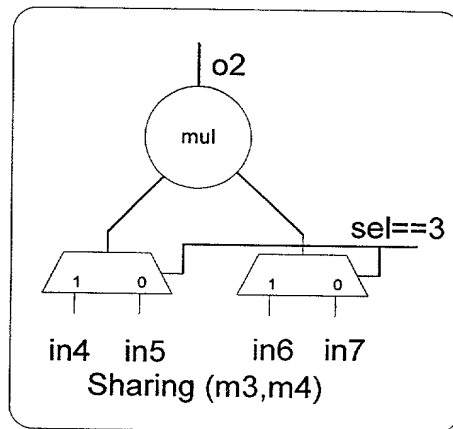
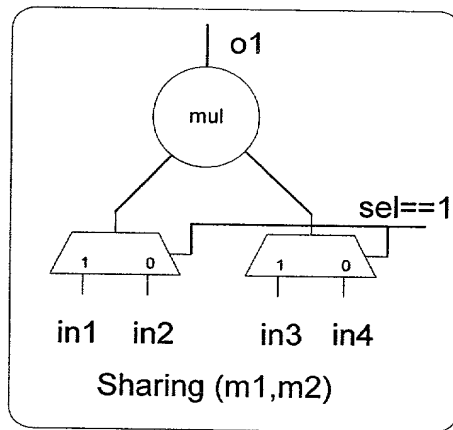


Fig. 4A

5/9

(b) Golden Circuit

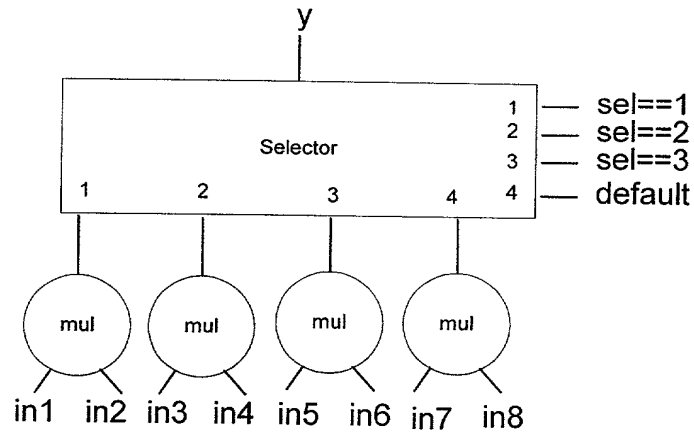


Fig. 4B

(c) Revised Circuit

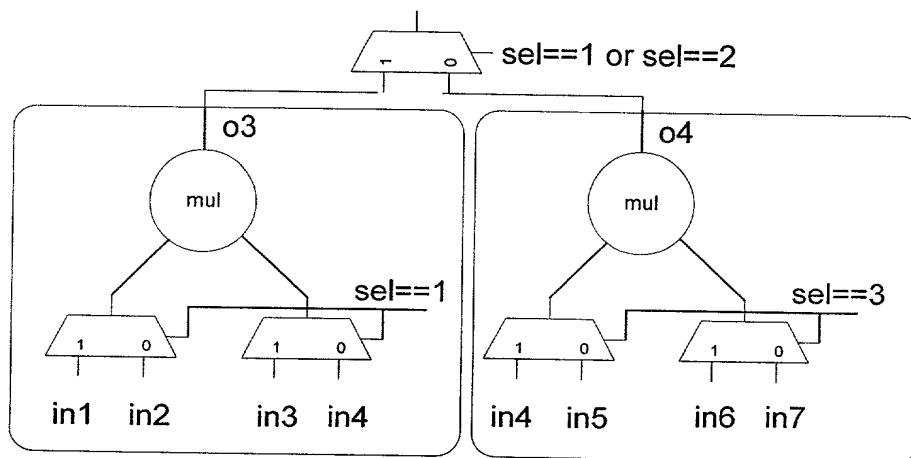


Fig. 4C

6/9

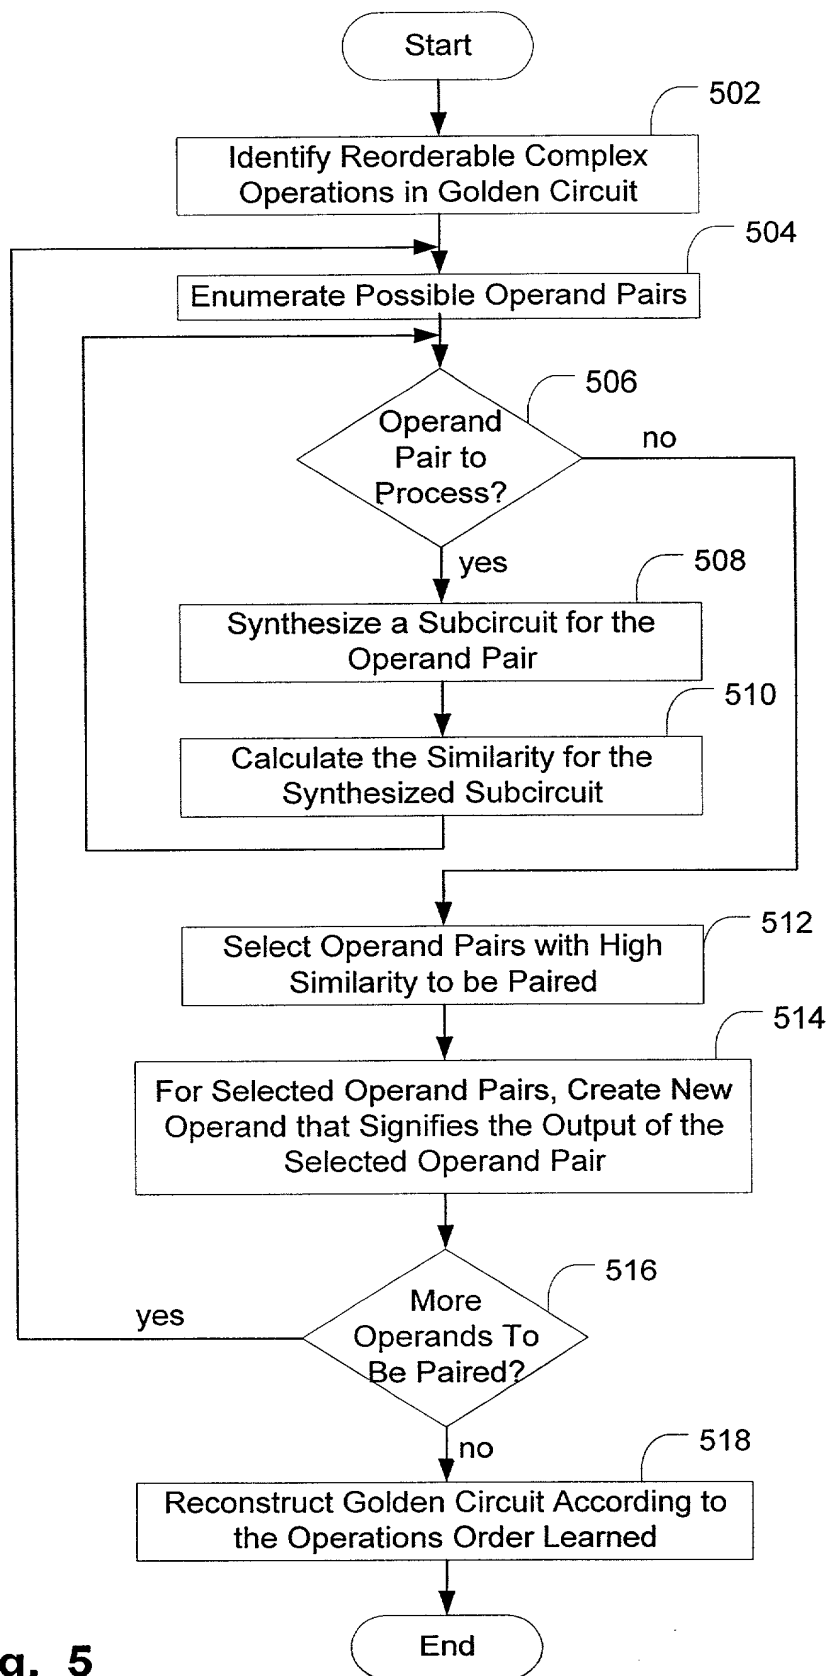


Fig. 5

7/9

(a) Golden Netlist

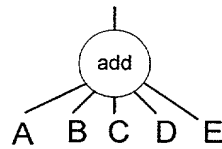


Fig. 6A

(b) Revised Netlist

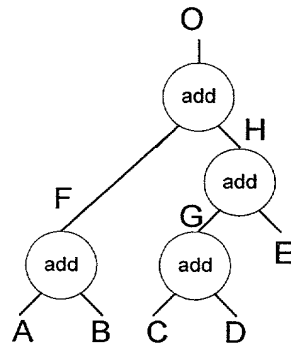


Fig. 6B

(c) Learning Steps

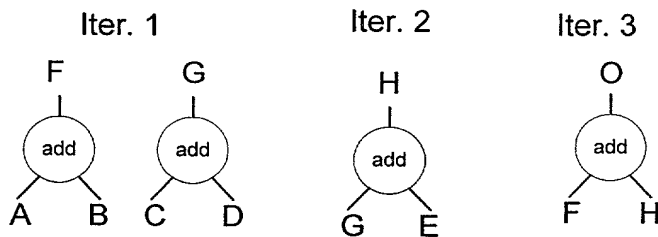


Fig. 6C

8/9

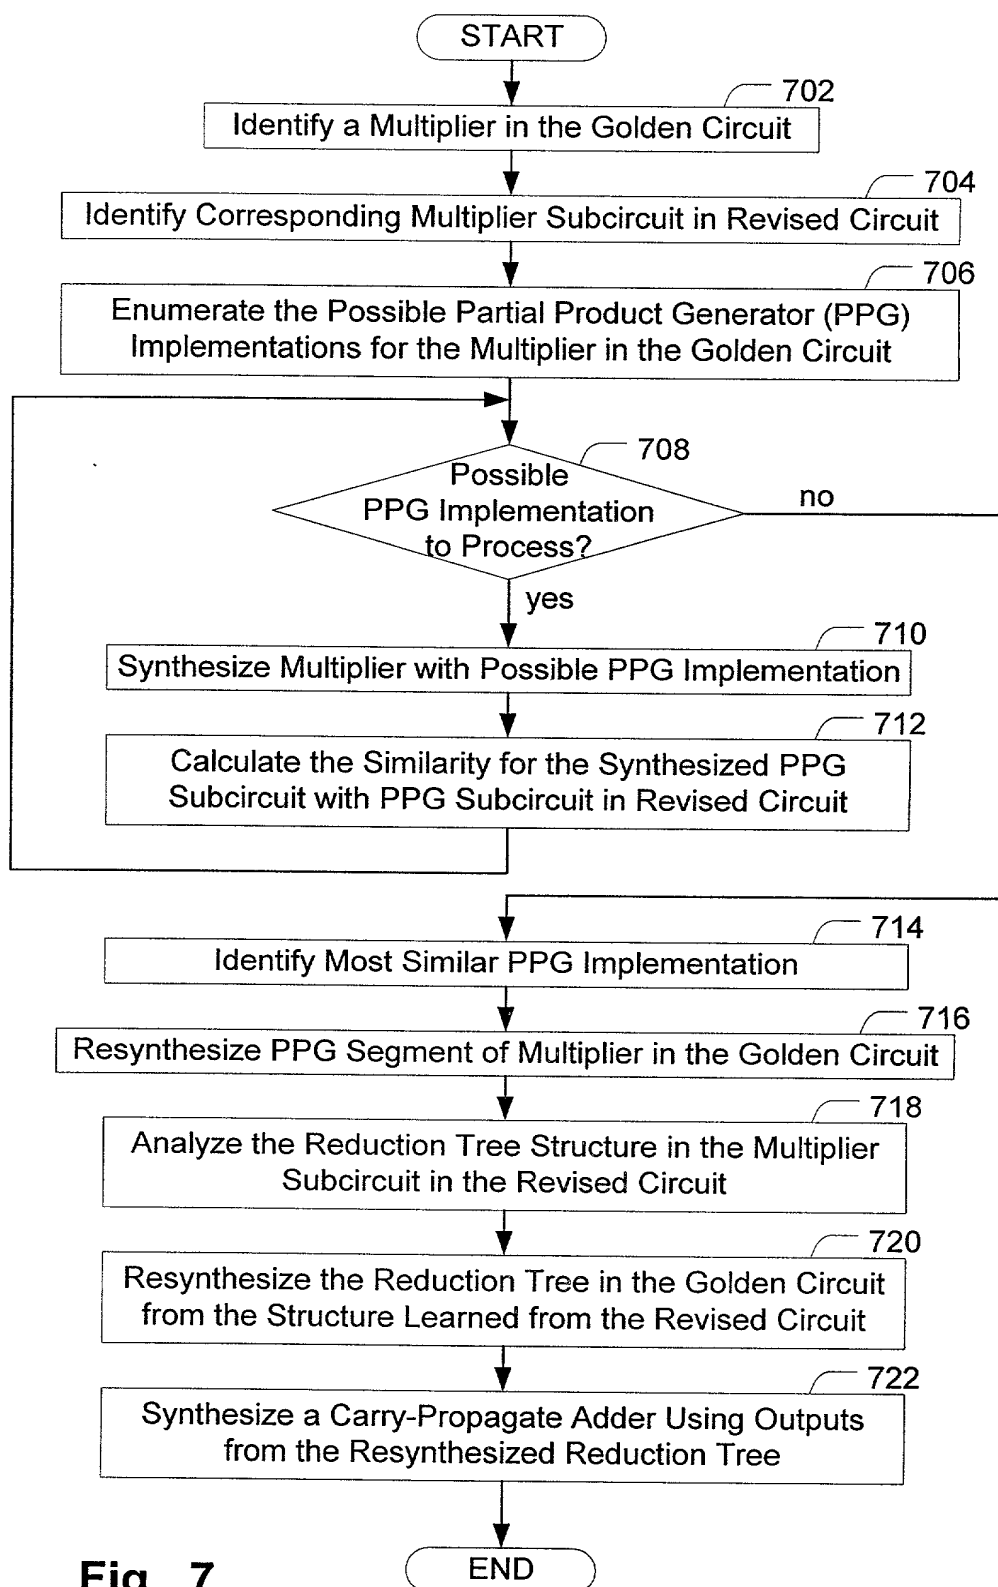


Fig. 7

9/9

Multiplier Example $P[6:0] = A[3:0] * B[2:0]$

